INSTALLATION

This product is suitable for installation within a standard 86mm or Europe 60mm pattress box.



For installing or removing the faceplate, please be careful that only pushes corners. Do not push the side middle, it may damage this product. Look at the picture, green arrow shows that there must be a push out for removal or push in for install.

SERVICE

Your Thermostatic keypad switch carries a 24-month warranty from the date of purchase.

About APEX

Founded in 2013, smart APEX Company is a developer and manufacturer of home automation components with extensive experience. At smart APEX Company, we always strive for innovation and quality. Under the APEX brand name, smart APEX Company offers a variety of smart system products, including DIN Rail mountable, multi-channel switch, dimmers, smart blind and HVAC control modules equipped with bus, Ethernet, Wi-Fi and ZigBee connections. Open communication protocol and available software drivers enable APEX components to be integrated with the best-known US smart home system manufacturer - Control4.



Calle Núñez Morgado, 4, Bajo Izq., Puerta 93, 28036 Madrid España

Contact Us

Phone +34 910 601 539

Email info@smartapex.es

Web www.smartapex.es



+34 910 601 539

— Call For Info



THERMOSTATIC KEYPAD SWITCH





PRODUCT INTRODUCTION

APEX thermostatic keypad switch is an intelligent device that can be remotely controlled through the Z-Wave network and radio waves. In the Z-Wave network communications, this product can be connected to any Z-Wave gateway. When using radio waves, this product can be used in conjunction with the Z-Wave gateway. The frequency of radio waves used by gateway like this: different countries or areas, the radio frequency is different. Four internal relays can work in two modes: four internal relays assigned to fan-coil with valve or used as a normal light switch. Each button on each corner has two-act (short or long press, each one can be used for making scenarios).

SPECIFICATIONS

Model number	APX-MZWTK-4C	
Power requirement	100 to 240VAC	
Power consumption	<1W	
Wireless frequency	868.4MHz EU (optional)	
Protocol	Z-Wave / CAN-BUS (Optional)	
Operational temperature	–10 to +70℃	
Humidity	5% to 90% non-condensing	
Weight	0.2 kg	
Material	Aluminum	
Face plate dimension	86x86mm	
Temperature sensor accuracy	+- 0.1°C Digital sensor	
Output relva current	5A per output	
Output mode	Fan colis, Duct split, Floor heating	

- 2. Make sure lights are fixed
- 3. Touch and hold the top left button for 4 seconds, blue led indicators will be blinking (note that gateway must be in identify mode). When identifying mode starts, blinking goes green and waits to complete joining.
- 4. When joining is completed, all led lights will be fixed, and the top and button red led goes off.


REMOVE LIGHT SWITCH FROM Z-WAVE NETWORK

- 1. Make sure the Light Switch is powered.
- 2. Set Z-Wave gateway into exclusion mode (Refer to gateway user manual)
- 3. Touch and hold the top left button for 12 seconds, red led lights will be blinking. If the gateway is in exclusion mode, the device will be removed from the network.

RESET TO FACTORY SETTING

Touch and hold the top left button for 12 seconds, red led lights will be blinking then release the button and press and hold for one more time 12 seconds. Led lights blinking multi-color, the central led will be red and it means the device restarted to factory setting

📕 WIRING DIAGRAM 📕 QUICK REFERENCE

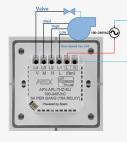



1 Button 1 LED status	7 Button1
2 System status	8 Button 2
3 Button 2 LED status	9 Button 3
4 Button 3 LED status	10 Button 4
5 System status	11 Temperature unit control buttons
6 Button 4 LED status	

ADD LIGHT SWITCH TO Z-WAVE NETWORK

1. Connect the switch to a power source, after making it powered, please do not operate it within lights blinking.



Buttons	Description
	Thermostat on/off button
	WHILE THERMOSTAT IS ON:
	LONG PRESS FOR 3SEC: change mode
•	(cool, heat, fan)
ၜ	WHILE THERMOSTAT IS OFF:
	LONG PRESS FOR 3SEC: active or
	deactivate temperature display on OFF
	mode
	Increase or decrees temperature set point
•	Fan coil speed control: low, medium, high
	or Auto
	LONG PRESS FOR 5SEC: enable or
	disable temperature display LOCK
Button 1	Short and long press for two scene
	WORK AS JOIN AND DISJOIN FROM
	THE NETWORK BUTTON
Button 2	Short and long press for two scene
Button 3	Short and long press for two scene
	Short and long press for two scene
Button 4	LONG PRESS FOR 12SEC: disable or
	enable CHILD LOCK

FUNCTION PARAMETERS

Go to the device configuration and then advance section on your gateway then click on add parameter as below:

when powering on 1				
0 0: OFF, 1:ON, 2:Last state when powering on 1 -3 to +3 degree Temperature compensation 2 Off = 0, Red = 1, Green = 2, Yellow = 3	#	Desired value	Description	Data type
1 -3 to +3 degree Temperature compensation Signed int 2 Off = 0, Red = 1, Green = 2, Yellow = 3 Blue = 4, Purple = 5 Cyan = 6, White = 7 Release button color LED status Unsigned in Unsigned in Color LED status 3 Blue = 4, Purple = 5 Blue = 4, Purple = 5 Press button color LED status Unsigned in Unsigned in Unsigned in LED status	О	0: OFF , 1:ON , 2:Last state		Unsigned int
1				
Compensation Compensation	1 1	−3 to +3 degree	·	Signed int
2 Blue = 4, Purple = 5			compensation	
2 Blue = 4, Purple = 5		Off = 0, Red = 1, Green = 2, Yellow = 3	Release button	Unsigned int
Cyan = 6, White = 7 Off = 0, Red = 1, Green = 2, Yellow = 3 Blue = 4, Purple = 5 Press button color LED status Unsigned in	2	Blue = 4, Purple = 5		
3 Blue = 4, Purple = 5 Press button color Unsigned in		Cyan = 6, White = 7	COIOI EED status	
3 Blue = 4, Purple = 5 Unsigned in		Off = 0, Red = 1, Green = 2, Yellow = 3	Bross button color	Unsigned int
Common C Maritan 7	3	Blue = 4, Purple = 5		
Cyan = 6, White = 7		Cyan = 6, White = 7	LED status	
4 0~49 Standby brightness Unsigned in	4	0~49	Standby brightness	Unsigned int
5 51~100 Working brightness Unsigned in	5	51~100	Working brightness	Unsigned int
6 0 ~10 Buzzer sound level Unsigned in	6	0~10	Buzzer sound level	Unsigned int
7 0: OFF , 1:ON Standby temp show Unsigned in	7	0: OFF , 1:ON	Standby temp show	Unsigned int
Lock display	8	0: OFF , 1:ON	Lock display	Unsigned int
buttons			buttons	
9 0: OFF , 1:ON Lock all buttons Unsigned in	9	0: OFF , 1:ON	Lock all buttons	Unsigned int
10 0=Cancel report status to home Report status Unsigned in	10	0=Cancel report status to home	Donort status	Unsigned int
center, 1=Normal working Report status Offsigned in		center, 1=Normal working	Report Status	
0:disable, 1:Heat only , Valve mode Unsigned in	11	0:disable, 1:Heat only ,	Valvo modo	Unsigned int
2:Cool only, 3: both		2:Cool only, 3: both	vaive mode	

After changing any value, press the save button.